INDOOR DIGITAL THERMOMETER- HYGROMETER

Features:

Environment comfort display: "COMFORT", "WET", "DRY" Temperature measuring range: 0°C~+50°C (+32°F~+120°F)

Temperature accuracy: $\pm 1.0^{\circ}\text{C}$ ($\pm 1.8^{\circ}\text{F}$) Temperature resolution: 0.1°C (0.1°F)

Humidity measuring range: 10%RH \sim 90%RH Humidity accuracy: $\pm5\%(40\% \sim 80\%)$ other $\pm8\%$

Time/Temp./Humidity indicate.

°F and °C temperature switch function.

MAX&MIN Temperature and Humidity memory function.

Calendar, Alarm clock, announce hour and 12/24 hours system clock.

Function setting:

- **1. Basic functions**: **MODE:** clock /alarm switch, and setting clock & alarm& calendar;**ADJ**: adjust the value of setting item, alarm on/off, date indicates.**MEMO:** indicates MAX/MIN temperature and humidity; **°C/°F:** °C/°F temperature switch; **RESET:** clear all the setting & memory, back to the original state.
- **2. Time and date setting**: Press **MODE** for 3 seconds, the minute starts gleaming, pressing **ADJ** can adjust the minutes ,Press **MODE** once again to set up clock, press **ADJ** can adjust the clock, press **MODE** to set up month ,press **ADJ** can adjust the month ,press **MODE** again to set up date ,press **ADJ** can adjust the date .press **MODE** to confirm.
- **3. Alarm clock setting**:Press [MODE] key to display the alarm clock time ,then press [MODE] 3 seconds, the minute starts gleaming, press[ADJ] to adjust the minute. Press [MODE] again once, the clock starts gleaming, press[ADJ] to adjust the clock. press [MODE] twice to confirm

Alarm clock turn on /off: Press [MODE] to enter alarm clock states ,press ADJ,it will appear a alarm clock symbol , Press [ADJ], it will

appear the announce hour symbol . Press [ADJ]once again, the alarm clock and announce hour symbol will appear synchronously ,it means that the alarm clock and announce hour function are turn on synchronously .Continue to press [ADJ] can be turn on or turn off the alarm clock, Press [MODE] to confirm.

- **4.** Calendar display: At current clock mode, Press ADJ to display the date automatically, it will be back after 3 seconds.
- **5**. MAX/MIN Humidity and temperature display: Press MEMO to display MAX/MIN humidity and temperature from the memory. Press the key for 2 seconds to clear the memory.
- **6.** Environment comfort display: the "COMFORT" character will appear when temperature is $20^{\circ}\text{C} \sim 26^{\circ}\text{C}$ ($68^{\circ}\text{F} \sim 78.8^{\circ}\text{F}$) and relative humidity is $50\% \sim 70\%\text{RH}$. "WET" will appear at any temperature when relative humidity is higher than 70%RH.. "DRY" will appear at any temperature when relative humidity is below 50%RH.

Notice

- **1.** Battery :AAA 1.5v .Put used battery back to the place where the government appointed.
- **2.**Working environment temperature range:0 ℃ ~50 ℃
- **3.** This meter is fit for family use, not used for accurate date measurement in industry.

MB-0330-01