

INDOOR/OUTDOOR HYGRO-THERMOMETER

WITH ALARM CLOCK

FEATURES

- °C/°F selectable
- Comfortable and uncomfortable index (comfort/ warm/ cool)
- MAX/MIN temperature and humidity memory
- Clock (12/24) with alarm/ snooze function
- Flip out stand at the back (if applicable)
- 3 meters wire with sensor probe
- Low battery indicator

SPECIFICATION

- Measurement range: -50°C~+70°C or -58°F~+158°F
20%~100%R.H.
- Accuracy: ±1°C or ±1.8°F in the range of -20°C~+70°C or -4°F~+158°F, Otherwise more than ±1°C or ±1.8°F
±3% R.H. in the range of 30~70%R.H., otherwise ±5% R.H.
- Resolution: 0.1°
- Ambient Temperature for the plastic case: -10°C~+50°C or +14°F~+122°F
- Battery: 2x1.5 volt AAA size or equivalent

OPERATION

Open the battery door. Insert 2 "AAA" batteries into the compartment. Close the battery door. It is ready for use now.

On/Off

To switch on or off the product.

"WARM", "COMFORT" or "COOL" sign appears at the appropriate temperature and humidity.

°C/°F

To select the desirable temperature unit.

Max/Min

Press once to recall the maximum temperature and humidity record. MAX sign appears.

Press again to recall the minimum temperature and humidity record. MIN sign appears.

It restores to the normal mode automatically after 5 seconds.

In/Out


Press once to display the outdoor temperature. OUT sign appears.

Press again to display the indoor temperature. IN sign appears.




Time Set

1. Press SET for 3 seconds to enter the time set mode. Time blinks.
2. Press HR and MIN respectively to set time.
3. Press 12/24 to select the time format.
4. The unit will return to the real time mode automatically in 5 seconds or by pressing SET again.

Alarm Set

1. Press AL/ SNZ for 3 seconds to enter the alarm set mode. AL sign appears.
2. Press HR and MIN to set the alarm.
3. Press AL/ SNZ to confirm the setting.  signs appears.
4. The unit will return to the real time mode automatically in 3 seconds or by pressing SET again.

Snooze Set

1. After alarm set, press AL/ SNZ twice to activate the snooze function.  and SNZ signs appear.
2. The unit automatically returns to the real time mode in 3 seconds.
3. When the set alarm time reaches, the alarm sign  flashes and alarm will last for 1 minute.
4. Press any key to stop the alarm.
5. The alarm sounds and SNZ sign flashes every 10 minutes within an hour.
6. To clear the snooze function, press AL/ SNZ for 3 seconds to enter the alarm set mode first. Then press AL/ SNZ once again.  and SNZ signs disappear.

Low Battery Indicator

Replace batteries when it shows on the display.